RCS Hydraulic load indication for forklift trucks

BENEFITS

- Attractively priced forklift measuring system
- Easy installation via T-coupling
- Indicator with 4 AA-batteries
- Suitable for rough applications
- For shipping weights and avoiding overloads

Top quality Simple applications



RAVAS

Σ

kg

 (\mathbf{I})

NET

->0/T<-



HOW RCS WORKS

The operator picks up a load and lifts it until just past the marked reference height. He then lowers it gently to the reference point and stops there. The 2100 indicator calculates the weight and after about 3 seconds shows it fixed in the display.

SYSTEM PACKAGE

- Weighing sensor
- Sealing ring
- Indicator 2100 with 4 AA-batteries and mounting bracket
- Lifting height reference mark stickers
- Mounting- and calibration instructions
- Operator manual

STANDARD SPECIFICATIONS

- Capacity to fit the capacity of the truck (2,500, 5,000 or 10,000 kg) Graduation 10 kg at 2,500 kg capacity 20 kg at 5,000 kg capacity 50 kg at 10,000 kg capacity Higher capacity till 99 tons on demand 2% of system capacity (see table System tolerance on the right) IP65 / NEMA 4 Protection class Display LCD, digit height 18 mm Controls 3 function keys, on/off button 6Vdc from 4 AA-batteries Power supply Battery life 6 months, when used normally
- Auto shut-off after 3 minutes of non-use

WEIGHING TOLERANCES

LIFTING CAPACITY	MAXIMUM TOLERANCE *
1.200 kg	50 kg
1.600 kg	50 kg
2.000 kg	50 kg
2.500 kg	50 kg
3.000 kg	100 kg
4.500 kg	100 kg
7.500 kg	200 kg
10.000 kg	200 kg

* Tolerance may occur above or below the weight on the display

INSTALLATION

Please note: The installation of the T-piece, the oil pressure sensor and other parts of the hydraulic scale will not be carried out by RAVAS, but must be done by the lift truck dealer! This installation must be completed prior to the visit of the RAVAS technician. The RAVAS technician will do the installation of the indicator, the connection to the power supply as well as the calibration.



Nanagement System ISO 9001:2015 ISO 14001:2015 ISO 45001:2018

www.tuv.com

OPTIONS*

- 12V power supply from truck battery
- Converter 80/48/36/24Vdc 12Vdc
- Thermal or matrix printer in separate housing (only on 12V version, prints weights above 200 kg)

RAVAS Europe B.V.

Veilingweg 17, 5301 KM Zaltbommel, The Netherlands T: +31 418 515220 E: salesoffice@ravas.com WWW.RAVAS.COM

